

**CONSTRUCTION  
CHEMICALS**

# Fast Cure Wet Area Waterproofing

## BATHROOMS, KITCHENS, TOILETS, LAUNDRIES

### HYDRATHANE

#### PACKAGING



### LIQUID FLASH 2 PACK

#### PACKAGING MIXING



#### APPLICATION



### ADHERING TILES

#### PACKAGING MIXING



#### APPLICATION



#### USES

BATHROOMS  
KITCHENS  
TOILETS  
LAUNDRIES

#### SUBSTRATES

CONCRETE,  
CEMENT RENDER,  
CEMENT SHEET,  
GYPSUM BUILDING  
BOARD

### MATERIALS:

Waterproof with LIQUID FLASH 2 PACK acrylic waterproofing membrane or HYDRATHANE, available from Construction Chemicals. Adhere tiles with KEMGRIP FLOOR AND WALL mixed with ELASTACRETE (flexible acrylic additive) or MONOFLEX (1 pack flexible cement) or KEMFLEX 2:1 (2 pack flexible) or FASTFLEX or GRIPFLEX from Construction Chemicals.

### SURFACE PREPARATION:

All surfaces must be clean and sound and free of grease, dust, coatings and other contaminants. New concrete must have cured for 28 days or more.

### WORKMANSHIP:

Apply products in accordance with the manufacturers written instructions and good trade practice.

### APPLICATION:

Apply the waterproofing membrane above or below the screed. At cracks, wastes, corners and junctions apply a bond breaker (neutral cure silicone or 50mm bond breaker tape). Apply 150mm wide thick coat of the membrane centrally over the junction and bed in 140mm REOMAT into the wet coat. Apply two coats. Apply the second coat at 90° to the first as soon as it is dry. (Recoat time is approximately 2 hours at 22°C). Apply each coat thickly (approx. 1.5mm wet) allowing it to flow rather than being brushed. Use a soft brush or roller for best results. Clean brushes etc. in water while coating is wet. A final dry film thickness of 1.5mm is required.


Curing: 3 days at 22°C at 50% relative humidity. Protect from rain for the first 24 hours. Cold damp conditions – increase the set time. Hot dry weather reduces set time.

### THICKNESS

Check the wet film thickness at 0.5 metre intervals and also at 0.5 metres along the bond breaking tape, with a wet film thickness gauge.

### CERAMIC TILING

Apply a mortar bed fortified with ELASTACRETE and fix tiles with KEMGRIP FLOOR AND WALL mixed with ELASTACRETE in place of water, MONOFLEX or FASTFLEX, GRIPFLEX or KEMFLEX 2:1.

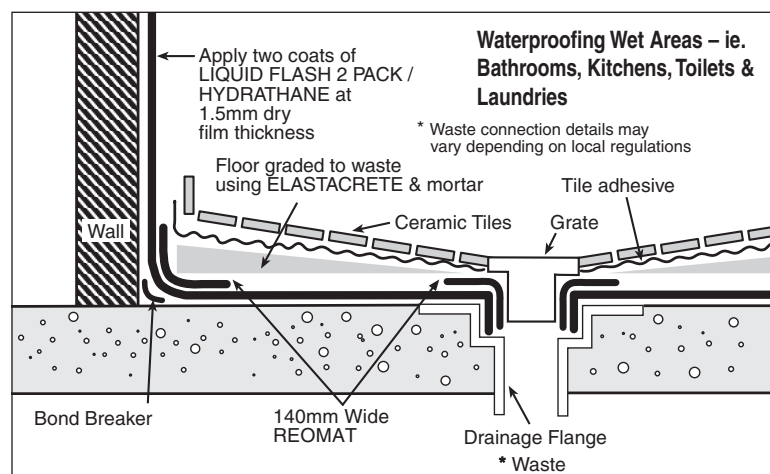

## CONSTRUCTION CHEMICALS

- **ADELAIDE** 135 CORMACK RD (Cnr Davis St) WINGFIELD 5013 PH: (08) 8243 7888 FAX: (08) 8243 7800
- **BRISBANE** 45 COULSON ST WACOL 4076 PH: (07) 3271 2944 FAX: (07) 3271 3892
- **MELBOURNE** 11 GABRIELLE CT BAYSWATER NORTH 3153 PH: (03) 9761 4711 FAX: (03) 9761 4748
- **PERTH** 11 COLLIE ST WELSHPOOL 6106 PH: (08) 9356 9999 FAX: (08) 9356 9955
- **SYDNEY** 31-33 NEWTON RD WETHERILL PARK 2164 PH: (02) 9756 3533 FAX: (02) 9756 3534
- **AUCKLAND** 16 CARPENTER RD EAST TAMAKI PH: (09) 273 5444 FAX: 0800 266 236
- **KUALA LUMPUR** LOT 2 JALAN KECAP1 33/2 ELITE INDUSTRIAL ESTATE OFF JALAN BUKIT KEMUNING 40000 SHAB ALAM PH: (603) 5122 2522 FAX: (603) 5122 2526

www.constructionchemicals.com.au

"The information contained in this technical publication is based on our current knowledge and experience and is provided as a guide only. In view of the many factors that may affect application it is the users sole responsibility to ensure suitability for a specific purpose."